



## Five Input Module Quick Start Guide

### Basic Setup Steps:

- (1) Connect unit to power and network.
- (2) Set up a computer on the same network as the input module. To do this, set the IP address of the computer to 192.168.1.50 with a netmask of 255.255.255.0.
- (3) Configure the input module using web browser. Do this by pointing browser to <http://192.168.1.2/setup.html>.  
Password is webrelay (all lower case).
- (4) Set the permanent IP address in the configuration page. Restart the input module (remove power, re-apply power).  
After restarting the input module, set your computer back to it's original settings and access the input module at its new IP address.




### Pinout:

- Vin+ : Power Supply Input (+)
- Vin- : Power Supply Input (-)
- +5 : 5VDC Output (100mA max)
- Gnd : Common for 5VDC output
  
- In1+ : Optically-Isolated Input 1 (+)
- In1- : Optically-Isolated Input 1 (-)
- ... : ...
- In5+ : Optically-Isolated Input 5 (+)
- In5- : Optically-Isolated Input 5 (-)

### Factory Default Settings

IP Address: 192.168.1.2  
 Subnet Mask: 255.255.255.0  
 Control Web Address: <http://192.168.1.2>  
 Setup Web Address: <http://192.168.1.2/setup.html>  
 Username: *no username required*  
 Control Password: *no password set*  
 Setup Password: webrelay (all lower case)

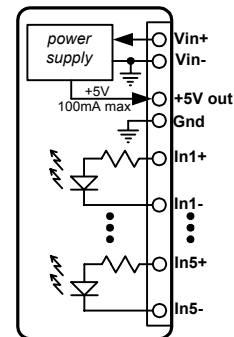

Note: The Five Input Module can be configured to operate at 10Mbps or 100Mbps. For best power savings and long term performance the 10Mbps setting is recommended.

Full Users Manual may be downloaded from  
<http://www.ControlByWeb.com>

For technical support, email questions to  
[support@ControlByWeb.com](mailto:support@ControlByWeb.com)



a division of...  
 Xytronix Research & Design, Inc.  
 North Logan, Utah, USA