

Quick Start Guide

Basic Setup Steps:

- (1) Connect unit to power and network only.
- (2) Set up a computer on the same network to configure WebRelay™. To do this, set the IP address of the computer to 192.168.1.50 with a netmask of 255.255.255.0.
- (3) Configure WebRelay™ using web browser. Do this by pointing browser to http://192.168.1.2/setup.html.
 Password is webrelay (all lower case).
- (4) Set the permanent IP address in the configuration page. Restart WebRelay™ (remove power, re-apply power). After restarting the unit, set your computer back to it's original settings and access WebRelay™ at its new IP address.
- (5) Connect relay contacts.

Factory Default Settings

IP Address: 192.168.1.2 Subnet Mask: 255.255.255.0


Control Web Address: http://192.168.1.2

Setup Web Address: http://192.168.1.2/setup.html

Username: no username required Control Password: no password set

Setup Password: webrelay (all lower case)



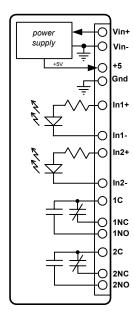

Power Supply Input + Power Supply Input -

+5V DC output (100mA max)
Ground (common) for 5V out

Optically-Isolated Input 1 +

Optically-Isolated Input 1 Optically-Isolated Input 2+

Optically-Isolated Input 2-

Relay 1 common

Relay 1 Normally Closed Relay 1 Normally Open

Relay 2 Common

Relay 2 Normally Closed Relay 2 Normally Open

Note: WebRelay-Dual™ can be configured to operate at 10Mbps or 100Mbps. For best power savings and long term performance the 10Mbps setting is recommended.

Full Users Manual may be downloaded from http://www.ControlByWeb.com

For technical support, email quesitons to support@ControlByWeb.com



a division of...

Xytronix Research & Design, Inc.

North Logan, Utah, USA