

## **Basic Setup Steps:**

- (1) Connect unit to power and network only.(Power connections require 0.250" tab connectors.)
- (2) Set up a computer on the same network to configure WebRelay-10<sup>™</sup>. To do this, set the IP address of the computer to 192.168.1.50 with a netmask of 255.255.255.0.
- (3) Configure WebRelay-10<sup>™</sup> using a web browser. Do this by pointing the browser to

http://192.168.1.2/setup.html.

Username is admin (all lower case).

Password is webrelay (all lower case).

(4) Set the permanent IP address in the configuration page. Restart WebRelay-10<sup>™</sup> (remove power, re-apply power).

After restarting the unit, set your computer back to its original settings and access WebRelay-10<sup>™</sup> at its new IP address.

(5) Connect relay contacts.

Revision: 1.1

(Relay connections require 0250" tab connectors.)

## **Quick Start Guide**



## Factory Default Settings

Default IP Address: 192.168.1.2 Subnet Mask: 255.255.255.0


Setup Page Access: http://192.168.1.2/setup.html

Username: admin

Voltage Input

Control Page Password: no password set

Setup Pages Password: webrelay (all lower case)

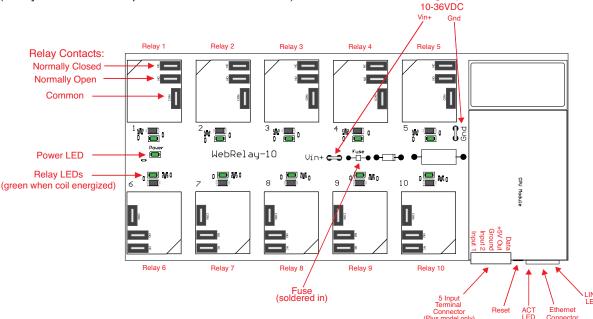

Full Users Manual may be downloaded from http://www.ControlByWeb.com

> For technical support, emal questions to support@ControlByWeb.com



a division of.... Xytronix Research & Design, Inc. North Logan, Utah, USA