




VersaTrak component configuration options for Radio and WiFi systems



Basic 868/900Mhz configuration

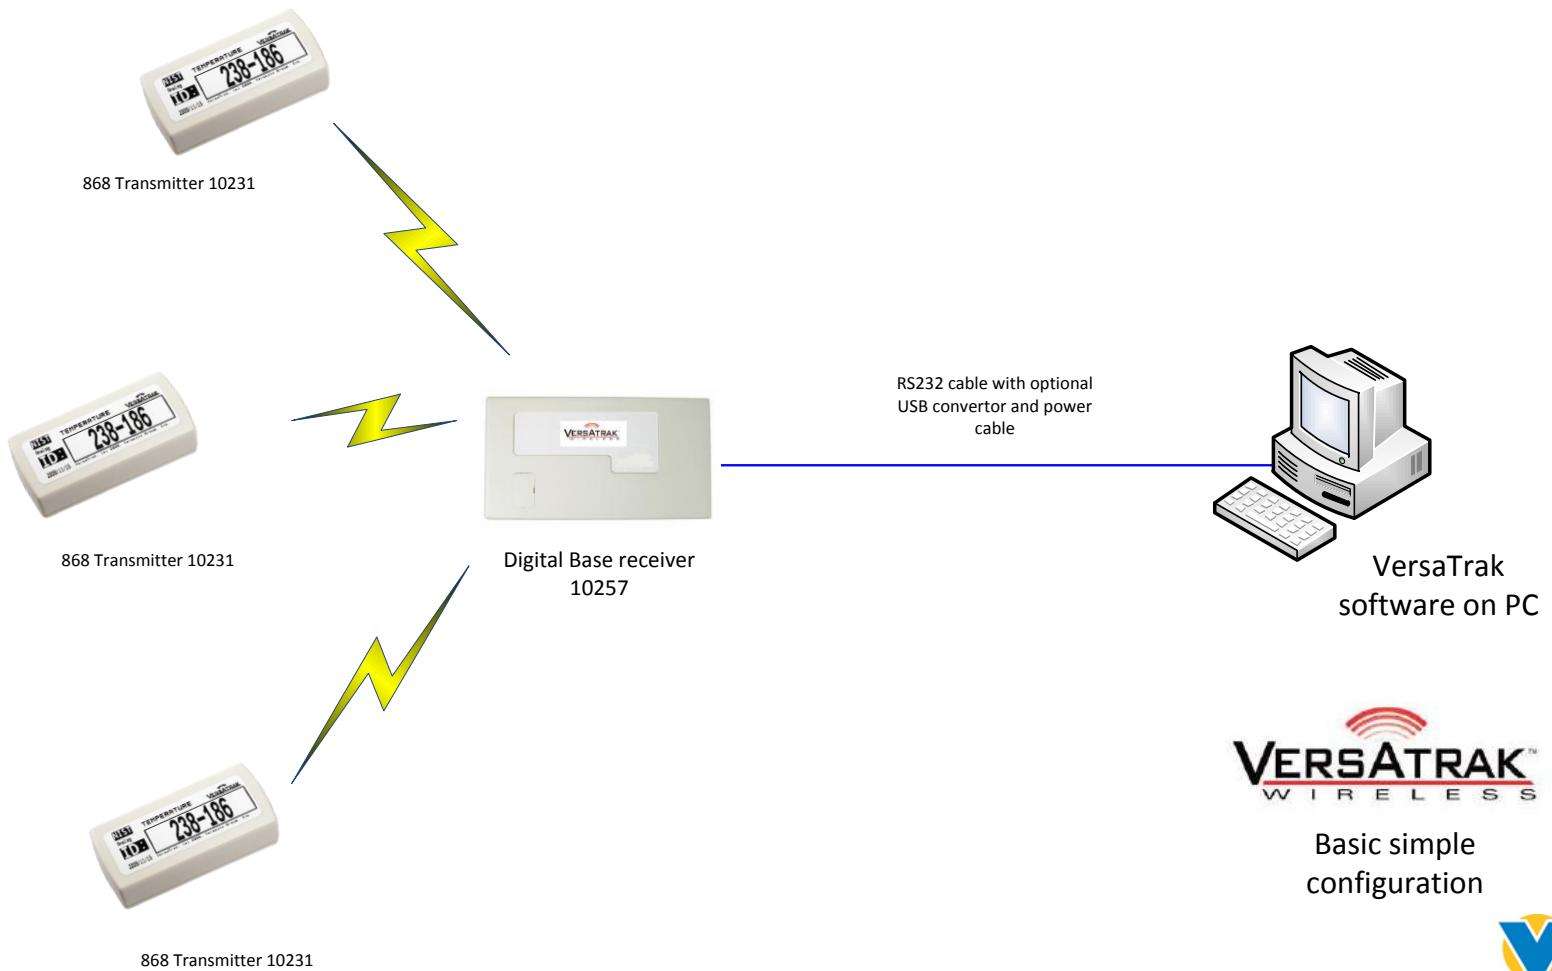


VERSATRAK
WIRELESS

Basic simple
configuration



VERACITY

Basic configuration with Repeater 868/900MHz

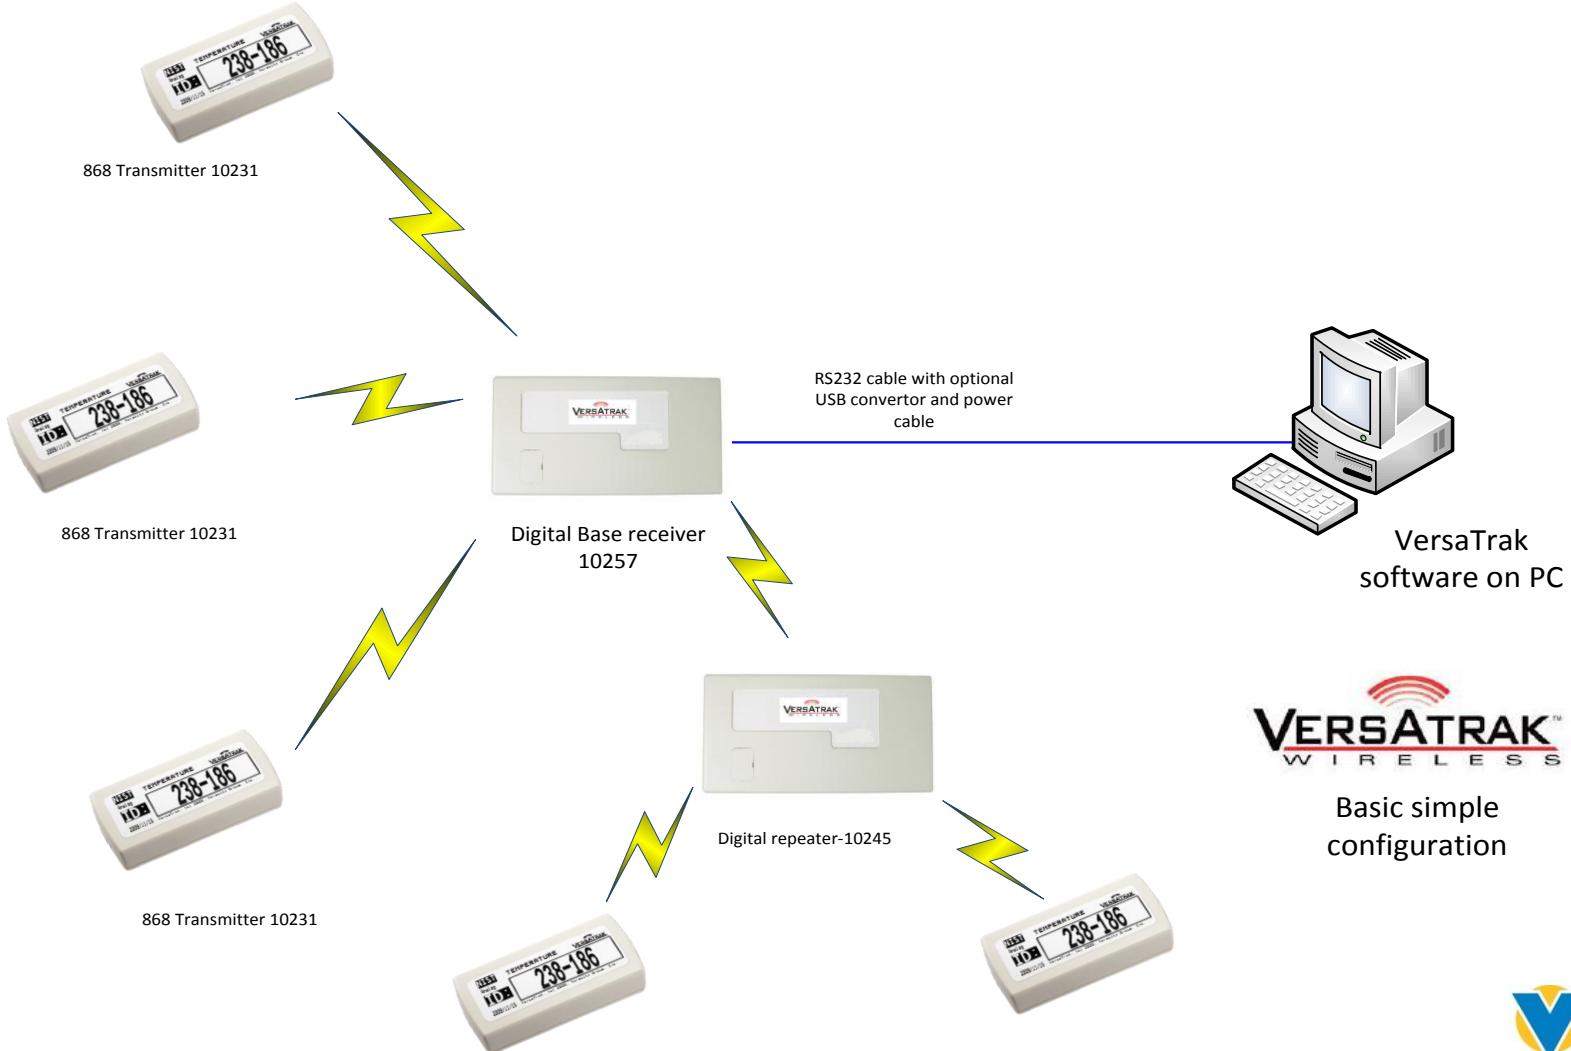


VERSATRAK™
WIRELESS

Basic simple
configuration



VERACITY


Single Network Configuration 868/900Mhz

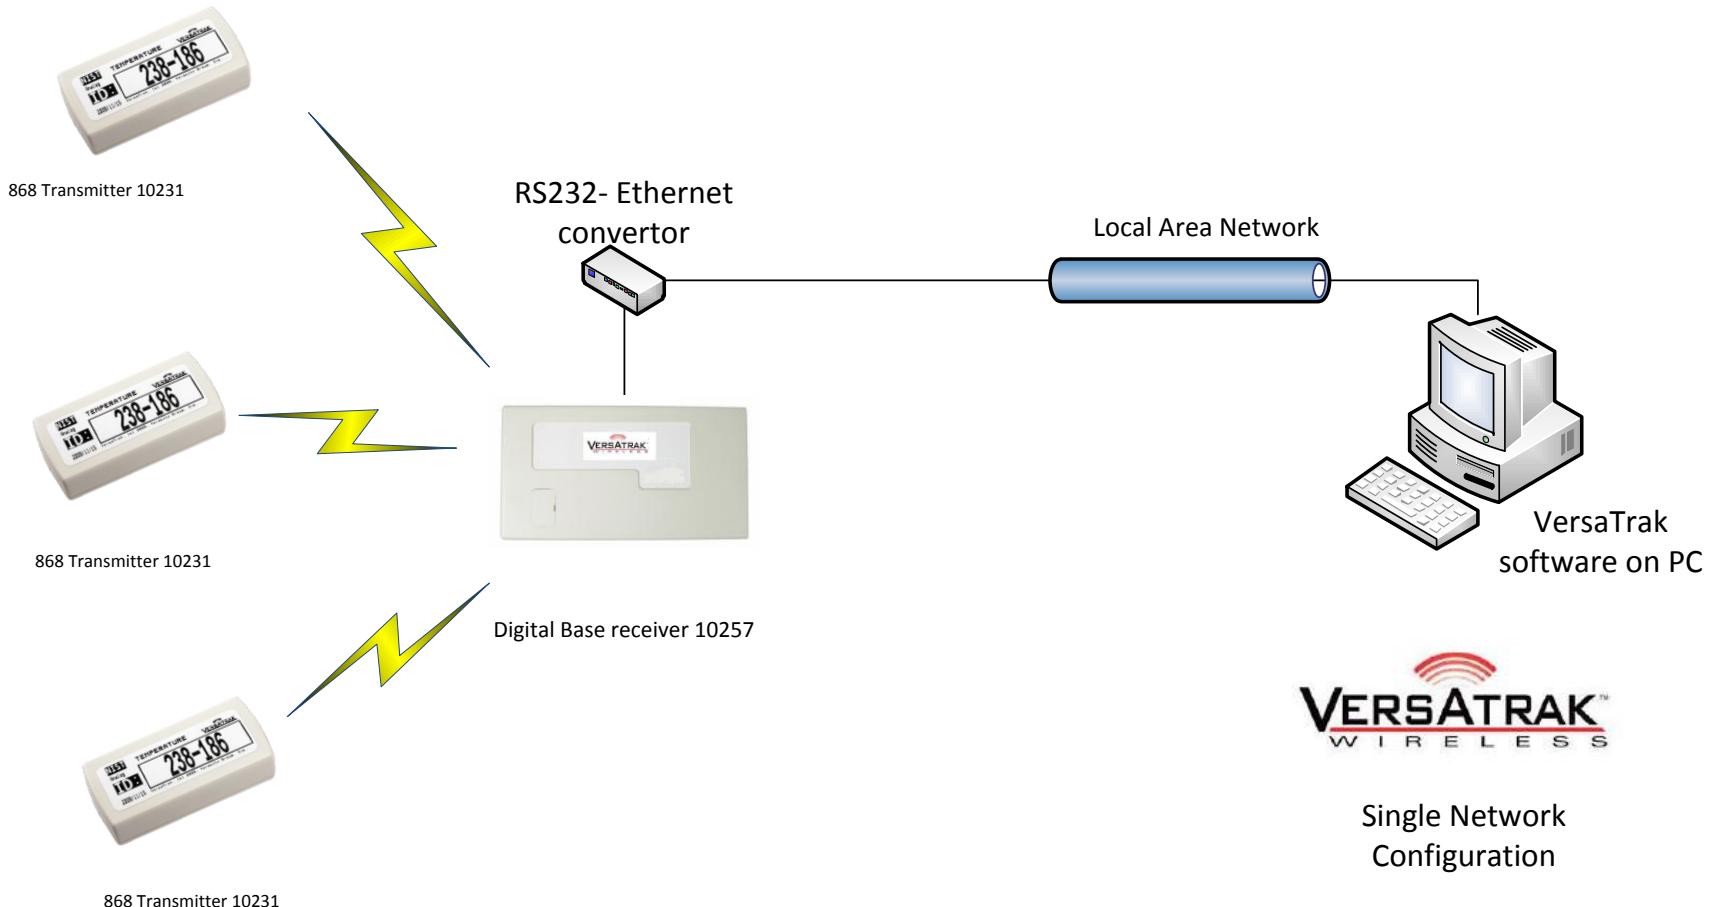


Single Network
Configuration

868 Transmitter 10231

Multiple Network configuration 868/900Mhz

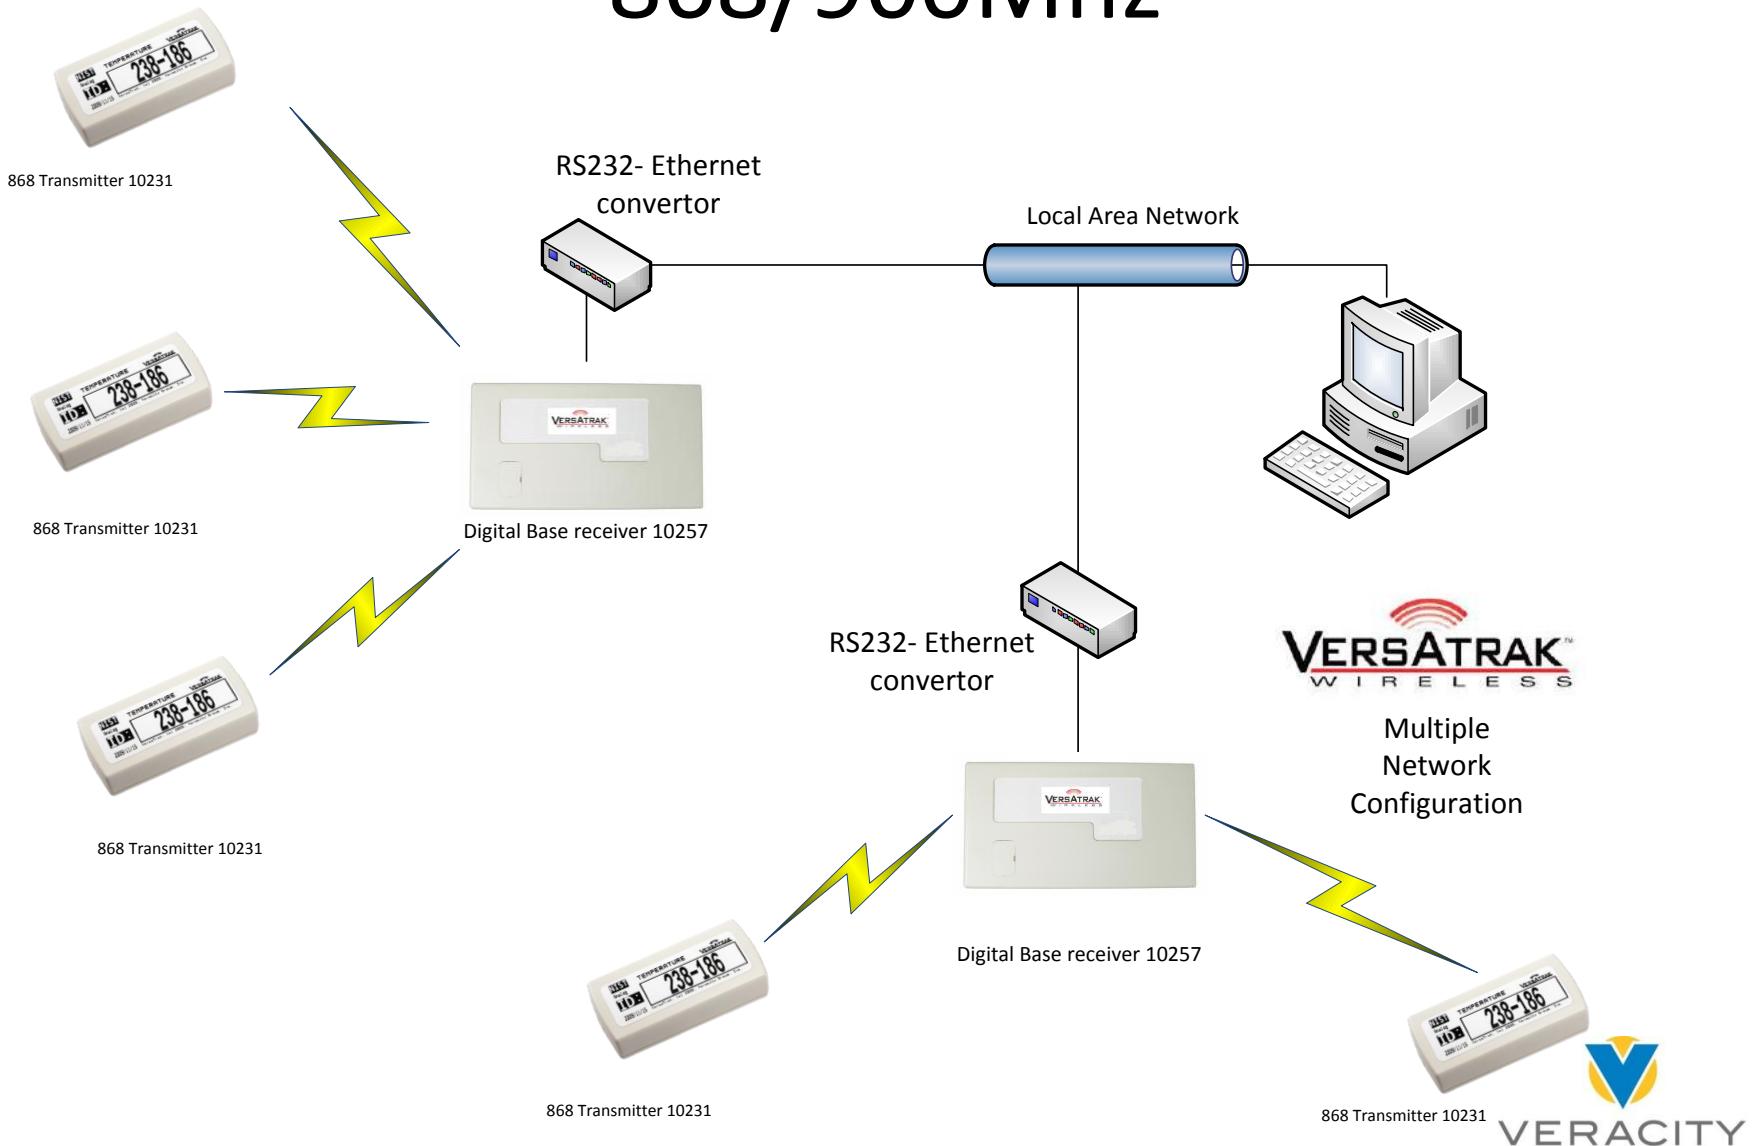


VersaHub component Integration

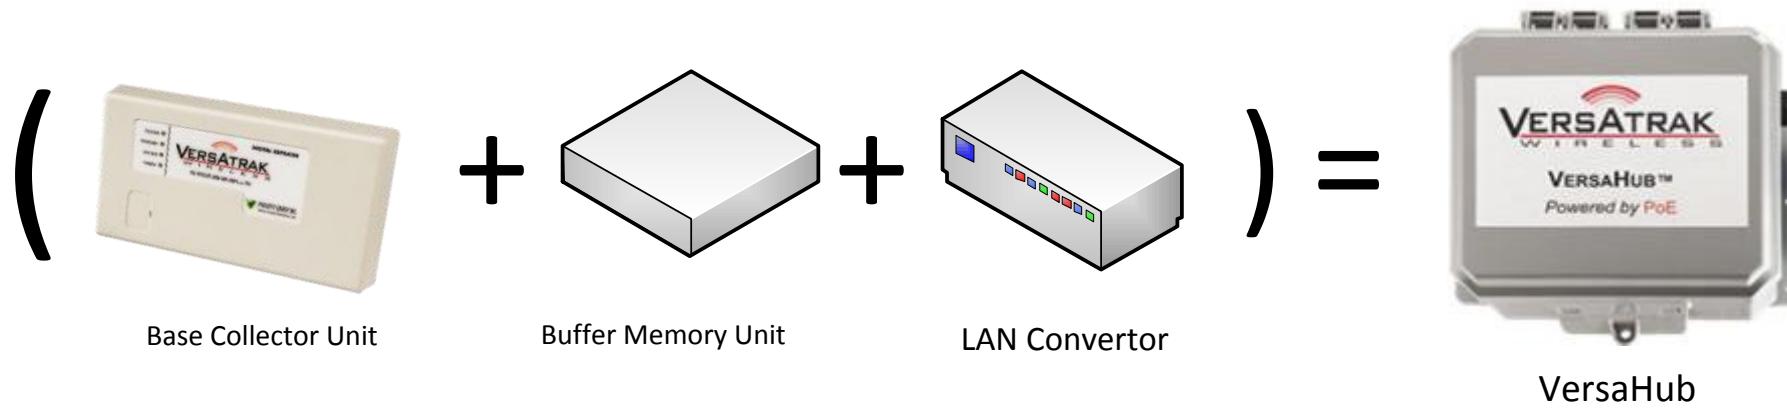

Includes power supply for all components via Ethernet cable (POE)


Basic VersaHub configuration

868/900Mhz

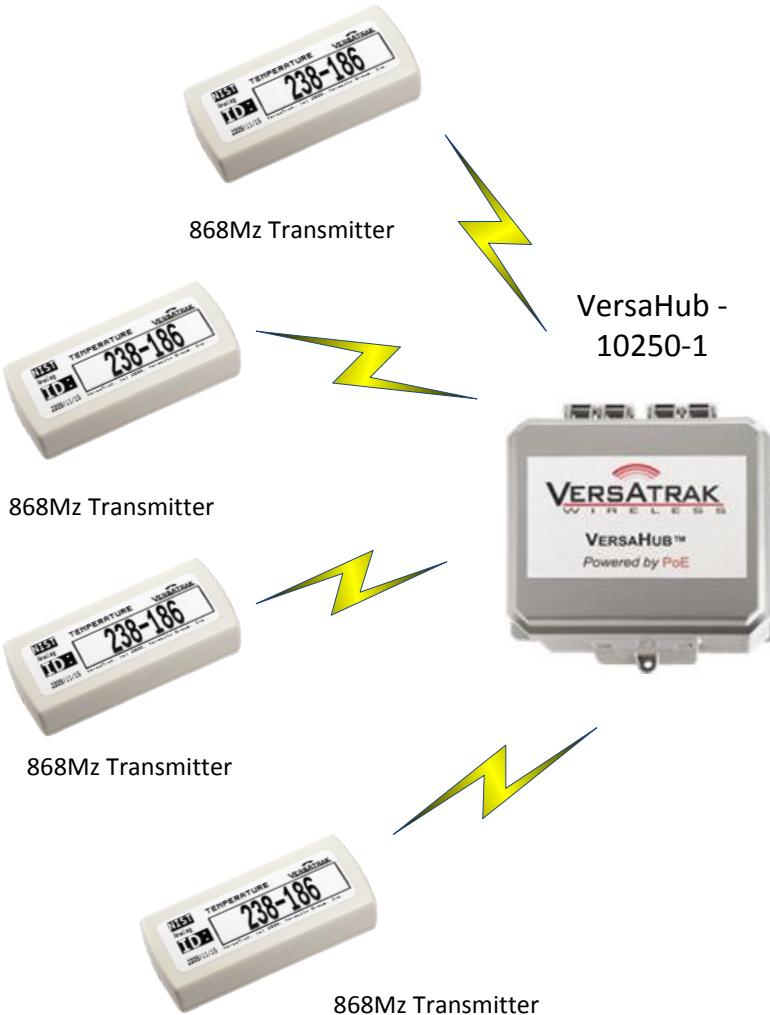

Simple Configuration using
VersaHub direct to PC


Ethernet cable with Power
integrated (POE)

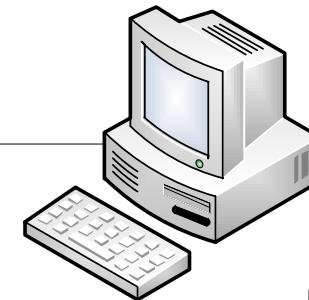

PC Server
with
VersaTrak
software



Basic WiFi configuration with Router

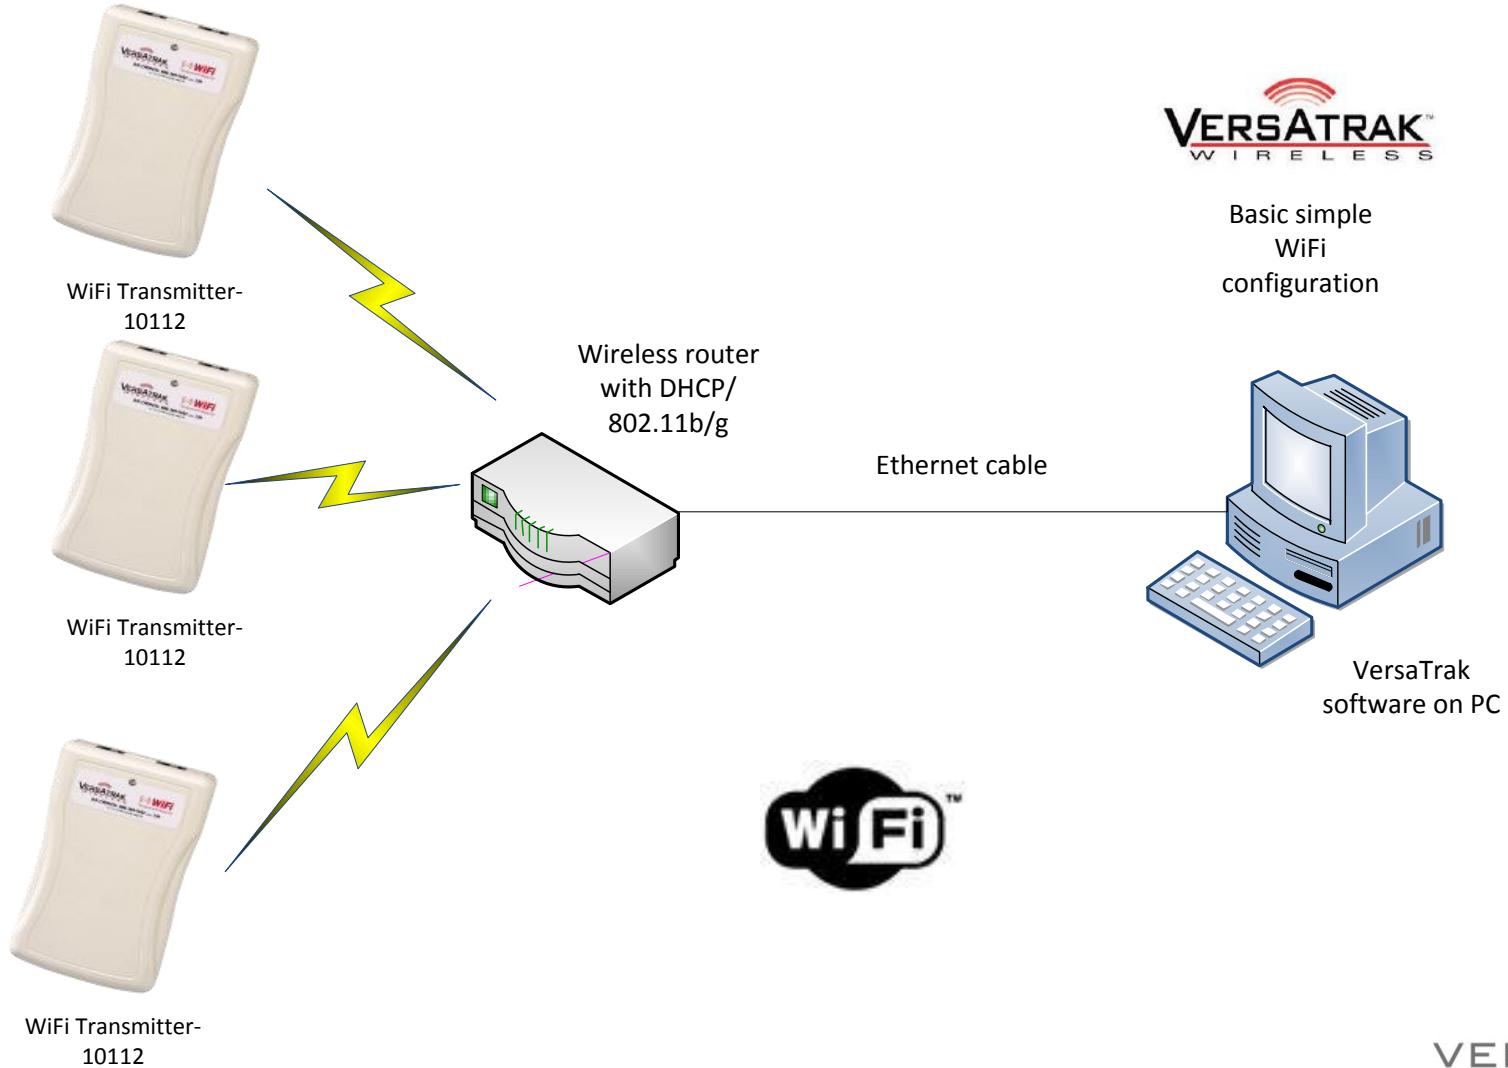

VERACITY

Networked WiFi configuration with Router

